

## GLOXIL LIGHT iM16k MAM

Field of application: Elastomers

### 1. Description

GLOXIL light iM16k MAM is a micro hollow glass sphere whose surface has been modified with a special methacrylic functional group. The process parameters are selected in such a way that, on the one hand, anchoring to the surface takes place and, on the other hand, released by-products are removed as far as possible during production. This helps minimize undesirable side effects, as they are potentially encountered with in-situ mixing (direct addition of additive to the compound).

During compounding, the methacrylic groups of GLOXIL light iM16k MAM provide good wetting and very good dispersion in the matrix polymer. During curing of the unsaturated polymers the methacrylic groups of GLOXIL iM16k MAM react in the presence of radicals with the polymer.

### Characteristics

Color CIELAB scale:	L*	98
Volatile matter at 105 °C RT 20 °C/RH 50		0.2 %
True density		0.46 g/cm <sup>3</sup>
Bulk density		0.17 g/cm <sup>3</sup>
Particle size distribution	D <sub>50</sub> D <sub>97</sub>	20 µm 40 µm
BET		2 m <sup>2</sup> /g
Thermal conductivity		0,143 W/(m·K)

### Packaging

Paper bags	á 12,5 kg
Big Bags	150 kg

### Shelf life

1 year if stored properly under dry conditions.



## 2. Application

The main areas of application for GLOXIL light iM16k MAM are thermoplastics, thermosets and elastomers, mostly for weight reduction or volume cost reduction.

In the elastomers sector, GLOXIL light iM16k MAM is primarily suitable for rubbers in the higher price segment that are crosslinked with peroxides, such as FKM and HNBR. In addition to weight savings, the main focus here is on reducing volume costs.

### Dosage:

- up to 25 % (m/m) or 45 % (v/v), depending on the targeted density reduction
- in FKM mostly up to 12 phr.

### Compounding Notes:

see 3M link: [3M glass bubbles compounding and injection molding guidelines.pdf](#)

Information on compliance with certain regulations/recommendations and other safety-related aspects: [Product safety information](#)

## 3. Benefits

Basic advantages of using the hollow glass sphere:

- density reduction
- weight reduction
- volume cost reduction

Advantages of GLOXIL light iM16k MAM over the hollow glass sphere without surface modification:

### Elastomers






- increased tensile strength
- increased moduli
- improved resistance to hot air, water, fuel and oil



**4. Effects of GLOXIL light iM16k MAM**

**Example FKM peroxide cured**

	phr		
<b>Carbon black N 990</b>	30	12	12
<b>3M™ Glass Bubbles iM16k</b>	-	12	-
<b>GLOXIL light iM16k MAM</b>	-	-	12

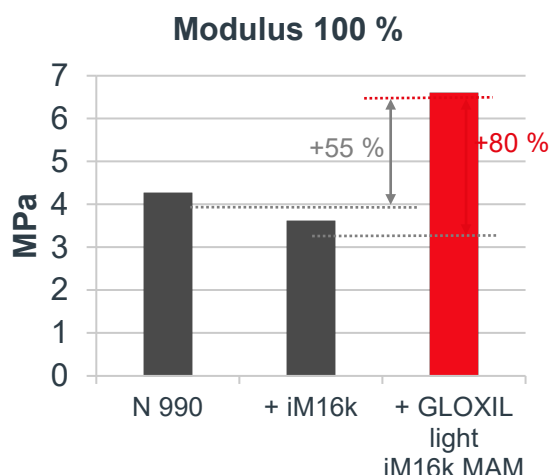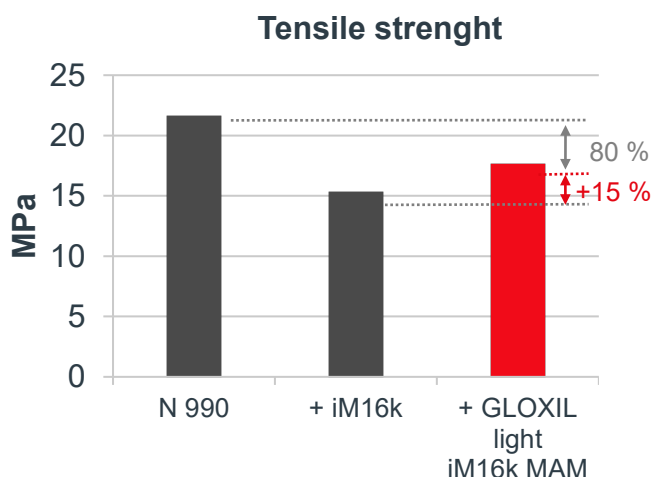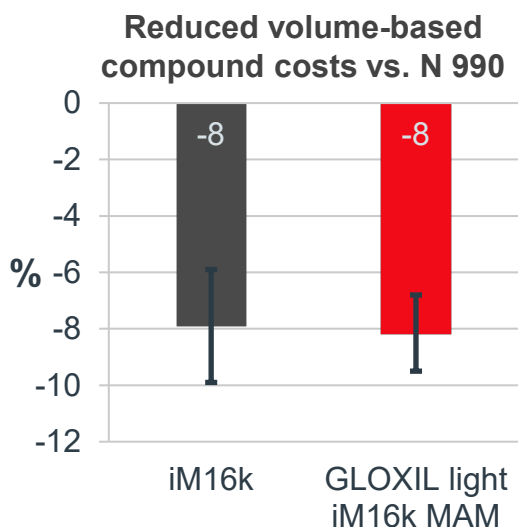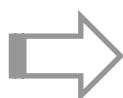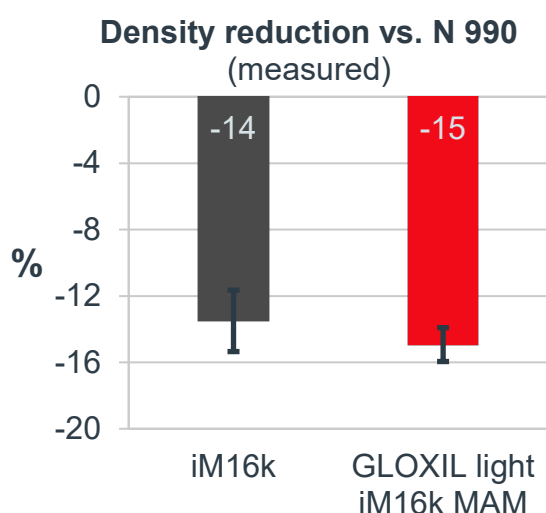

Our applications engineering advice and the information contained in this memorandum are based on experience and are made to the best of our knowledge and belief, they must be regarded however as non-binding advice without guarantee. Working and employment conditions over which we have no control exclude any damage claim arising from the use of our data and recommendations. Furthermore we cannot assume any responsibility for patent infringements, which might result from the use of our information.